


Assembly Instructions For **P1251** (E) 11/11

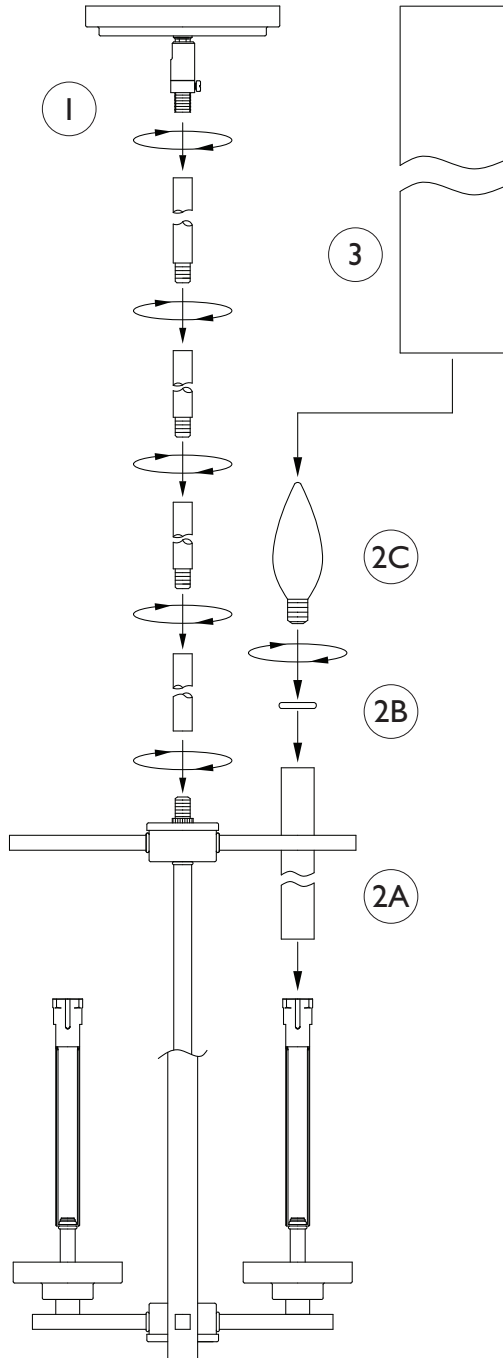

**IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE
OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
2. A. Install candle tube by slipping through sockets.
B. Slip the candle follower on top of the candle tubes.
C. Install type-B, candelabra base, of 60 Watt maximum bulbs (not included).
3. Install the shade onto the fitter.